 
 


Instruction of Remote Control Duplicator JJ-CRC-SM27

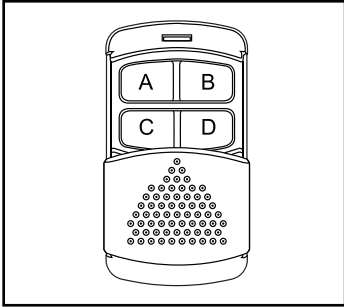 


1.Remote control model SM27

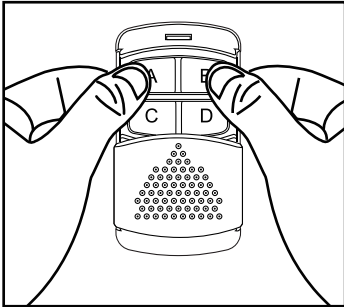


2.Clean the codes first.

Press the button A and B at the same time about 8 seconds, until the LED keep flashing, release the buttons, all codes be removed.

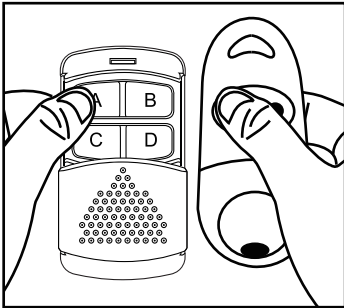

3.Copy code by face to face.

 Hold the original remote and duplicator remote between 1cm. Hold press any button of the duplicator remote and hold press one of the original remote button, until the remote duplicator's LED flashes fastly and keep lighting on, means the copy operation is successfully. (Repeat the operation to copy other original codes and store into remote duplicator's different buttons)

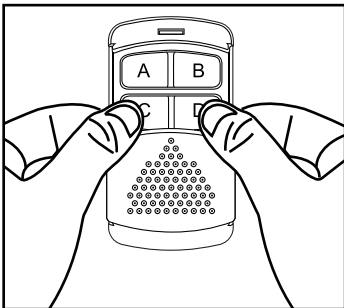

4.Code retrieval.

If the code is carelessly removed,by pressing 3rd and 4th buttons simultaneously until the LED flashes The code will be recovered.

Applicant: The duplicator can assign up to 4 different channels to the 4 buttons. I.e. upto4 gagage door or gate receiver. The duplicator only can copy 99% fixed code. It cannot copy rolling code, Please find the brand list(the brand just for example,more brands can be duplicated) the duplicator can copy:

APLIMATIC-AMX1 433	APLIMATIC-AMX2 433	APLIMATIC-AMX4 433	BENINCA-LO.T2W
BENINCA LO T2WMS	BENINCA-LO.T4W	BFT-TEO2	BFT-TEO3
BFT-TEO4	BLBER-TSAW1	BLBER-TSAW2	CAME TOP432NA
CAME-TOP432M	CAME-TOP432S	CAME-TOP434A	CAME-TOP434M
CASIT-MPS TF2E	CASIT-MPS TF4E	CASIT-TX53	CASIT-TXS1
CASIT-TXS2	CASIT-TXS4	DEA 433-1(237)	DEA 433-2(238)
DEA GENIE S(263)	DEA-GENIE S(263L)	DEA PUNTO2(268)	DUCATI-TASW1
DUCATI-TASW2	DUCATI-TSAW3	ELBER-TSAW3	GIBIDI 433-2
FAAC TM 433-1	FAAC TM 433-3	MONSEIGNEUR-ARC 2	MONSEIGNEUR-ARC 4
NICE-FLO 1	NICE-FLO 2	OPENOUT-TMQ433-4	PRASTEL-MPSTF4ERJ
PRASTEL-MPSTF4EGRIS	RIB-MOCN 4	SEAV-TXS1	SEAV-TXS3
SEAV-TXS4	TAU-250-TX2D	TAU-250-TX4D	TAU-BUG4
TBLCOMA-TANGO2SW	TELCOMA-TANGO4 SW	V2 TSC4	